

## Plissé II Single Door Custom Fit Installation Instructions

### Installation Overview


- Preparation: Unpack & Check Box Contents
- Step 1: Assemble Unit
- Step 2: Install Unit & Adjust Tension
- Step 3: Install Trim Pieces

### What You Need

- #1 Phillips Screw Driver


### What's in the Box

- Screen Assembly
- Bottom Rail
- Top Rail Assembly
- Bottom Rail Dust Cover
- Small Parts Pack

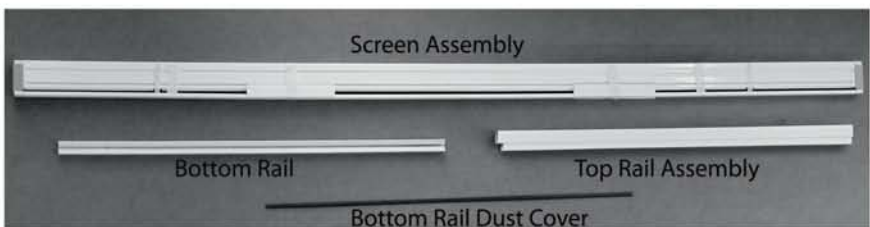


### What's in the Small Parts Pack

- 1 - Tension Adjust Wrench (A)
- 5 - Large Screws (B) for Frame Side
- 5 - Small Screws (C) for Latch Side
- 5 - Frame Hole Covers (D)
- 4 - Optional Line Hooks (E)
- 5 - Latch Frame Screw Hole Covers (F)

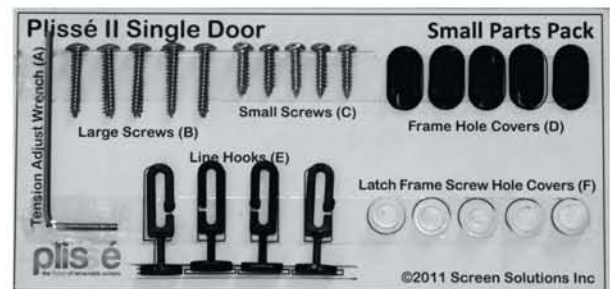

### What's in the Handles Pack

- 2 - Handles
- 1 - Handle Allen Wrench

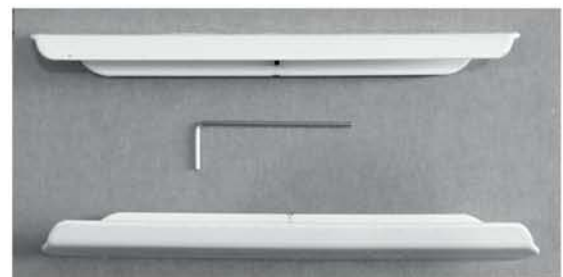


**If you ordered an optional adapter, refer to included instructions for associated parts.**


## Plissé II Single Door Custom Fit Installation Instructions, cont.

### Step 1 - Assembly


**1-A** After unpacking box, lay parts out on floor matching the colored dots as shown here:

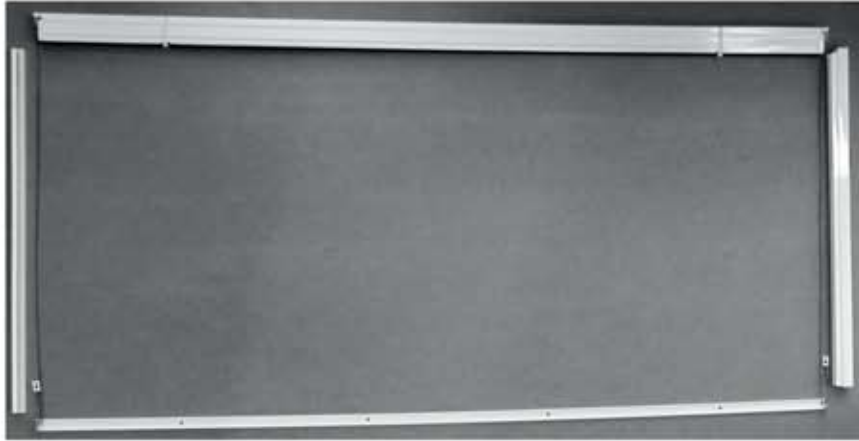

**1-B** Insert tension blocks in top and bottom rails.

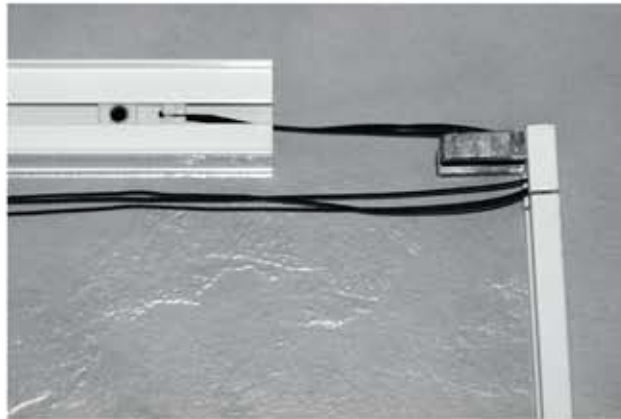


**1-C** Assemble screen unit by pushing rails onto the corners of the frame and latch frame. When attaching the top rail assembly to the corners grasp **only** by the inner rail. **Be careful not to pinch tension lines between rails and corners.**

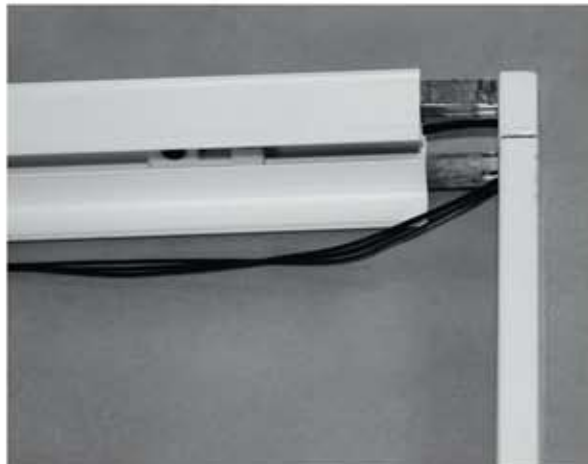

## Plissé II Single Door Custom Fit Installation Instructions, cont.

### Step 1 - Assembly, cont.

- 1-D** Using provided allen wrench slide tension block to arrow as shown and tighten snugly. *Do not over tighten.* Remove packing tape and blocks from frame side.

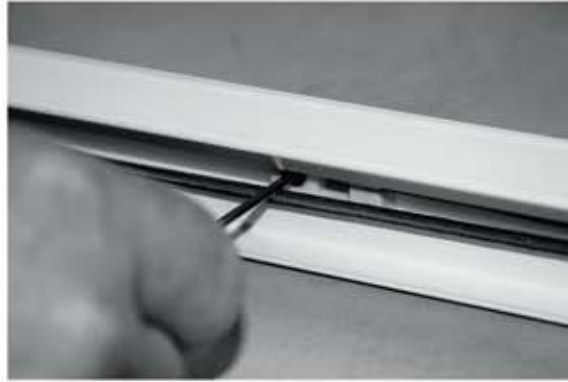

### Step 2 - Install

- 2-A** Remove packing tape from frame side. Stand assembled unit in opening, pushing up to compress top rail assembly before allowing unit to drop down onto your threshold or other *solid* surface.



- 2-B** Place small screws (C) in latch frame, *making sure bottom rail is touching threshold or other surface.*

Small Screw (C)



- Partially close screen and place large screws (B) in frame side while carefully holding fabric out of the way to avoid damage.

Large Screw (B)



*Screws shown in actual size.*

## Plissé II Single Door Custom Fit Installation Instructions, cont.

### Step 3 - Trim & Adjust

- 3-A** Place hole covers in frame and latch frame as needed.



- 3-B** Install handles at a comfortable height using provided handles wrench.



- 3-C** *Optional* Tension Line Hooks are used primarily in homes concerned with keeping small animals either in or out.

If desired, install tension line hooks only on bottom by sliding the hooked end over the bottom tension line with the other end hooked into the groove in the rail. *Skip step 3-D if using tension line hooks.*

- 3-D** Install dust cover below lines in bottom rail.  
*(Not applicable if using optional tension line hooks.)*



- 3-E** Adjust tension as necessary so screen slides easily and brush seal makes solid contact with frame.

If the top & bottom do not close evenly:

- slide the top plastic tension block toward the hinge side to make the top close more than the bottom *or*
- slide the bottom plastic tension block toward the hinge side to make the bottom close more than the top.

***Sit back & enjoy the bug-free breeze provided by your new Plissé retractable screen!***