

REPAIR INSTRUCTIONS


Fabric assembly - remove from housing and replace

Overview

If you are replacing the fabric assembly or replacing the tension lines, these instructions will show how to remove the fabric assembly from the housing and how to put it back in. Refer to specific instructions for removing the fabric/housing assembly from the screen frame for double and single door screens.

What you'll need

**Two markers
or similar items**

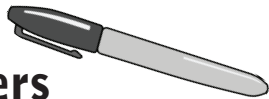

**Standard
screwdriver**



**No. 1 Phillips
screwdriver**



General Notes

Review these instructions completely prior to beginning this repair.

For the purpose of these instructions it is assumed you have the fabric/housing assembly removed from your frame and laid out on a workbench.

All drawings and written instructions in this document will show and describe the fabric/housing assembly with the top to your left on the bench.


Please refer to the Parts Identification drawing located at the end of this document for help identifying the individual parts mentioned in these instructions.

If you ordered a fabric replacement or tension line kit, it will come with assorted small parts that you may need to complete this procedure.


If you are removing the fabric assembly in order to replace the tension lines please refer to the specific instructions for tension line replacement.

Step by Step Instructions

Step 1 Remove fabric bracket

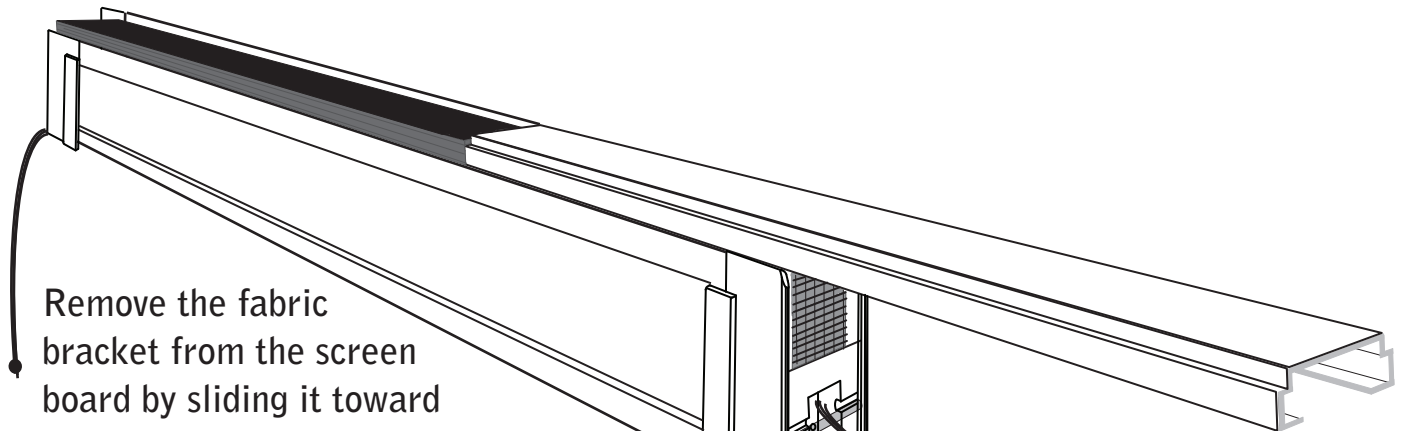

Remove the fabric bracket from the screen board by sliding it toward either end. Set fabric bracket aside with the top at your right.

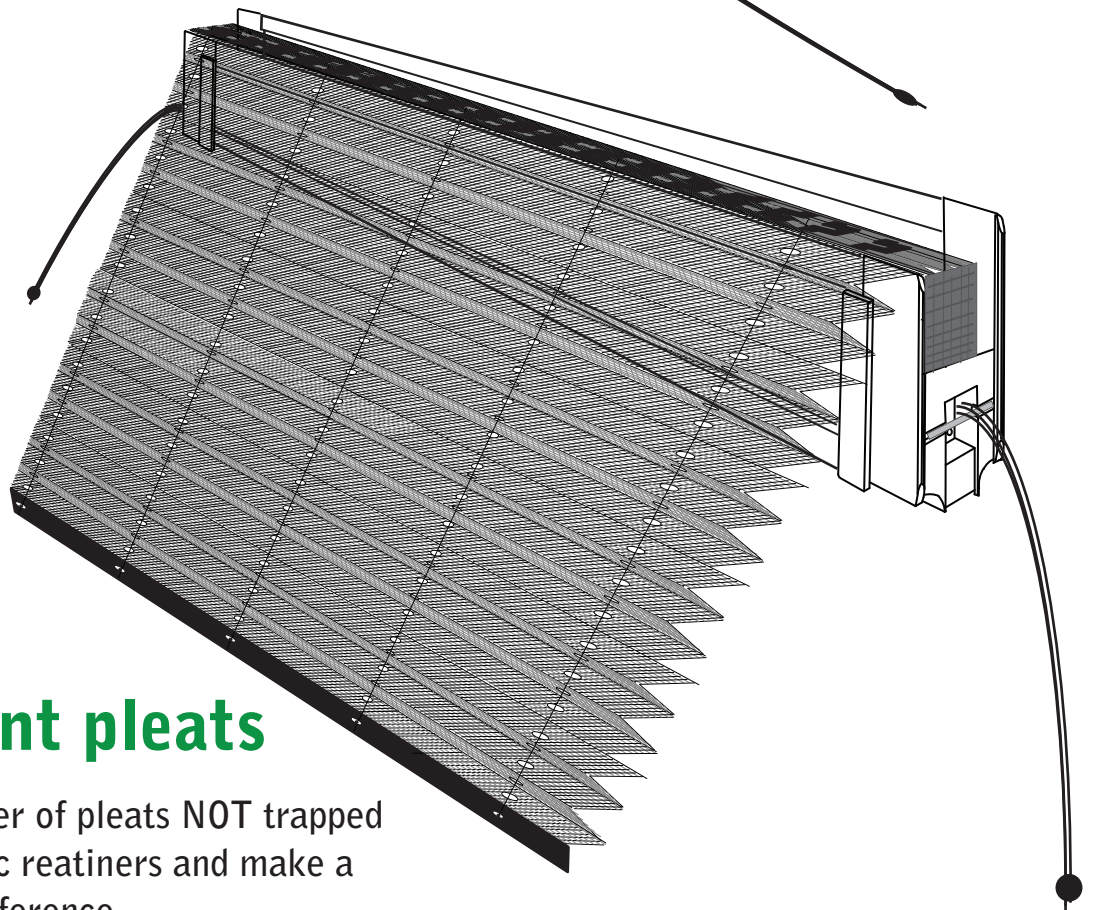


Step 2 Count pleats

Count the number of pleats NOT trapped behind the fabric retrainers and make a note for later reference.

Step by Step Instructions continued


Step 3 Remove fabric retainers

Using a flat blade standard screw driver remove the fabric retainers as shown.

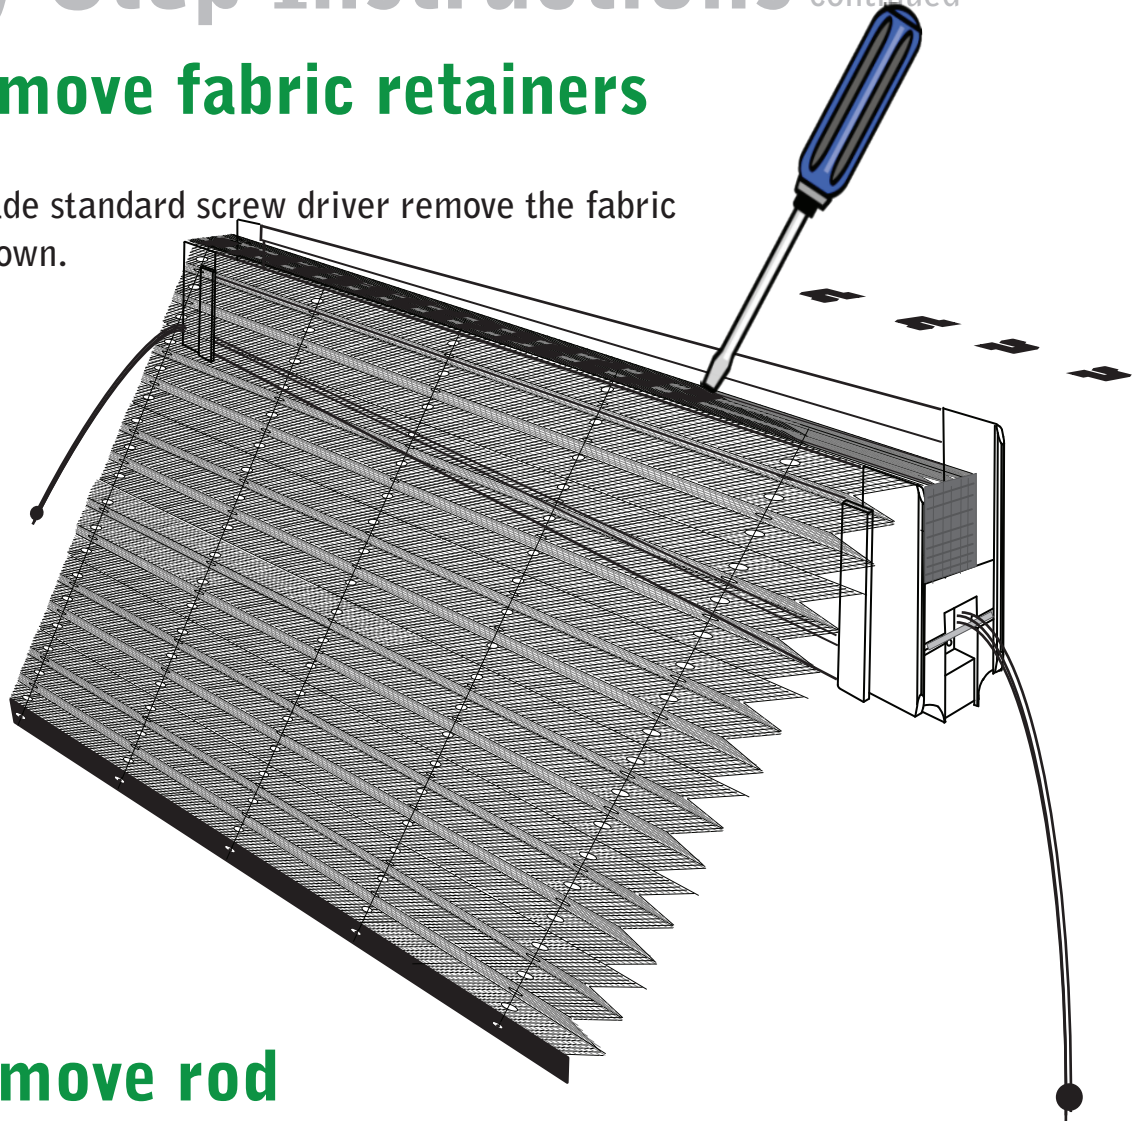

Step 4 Remove rod

Using a standard screw driver pry the stainless steel rod out of the groove on the housing end.


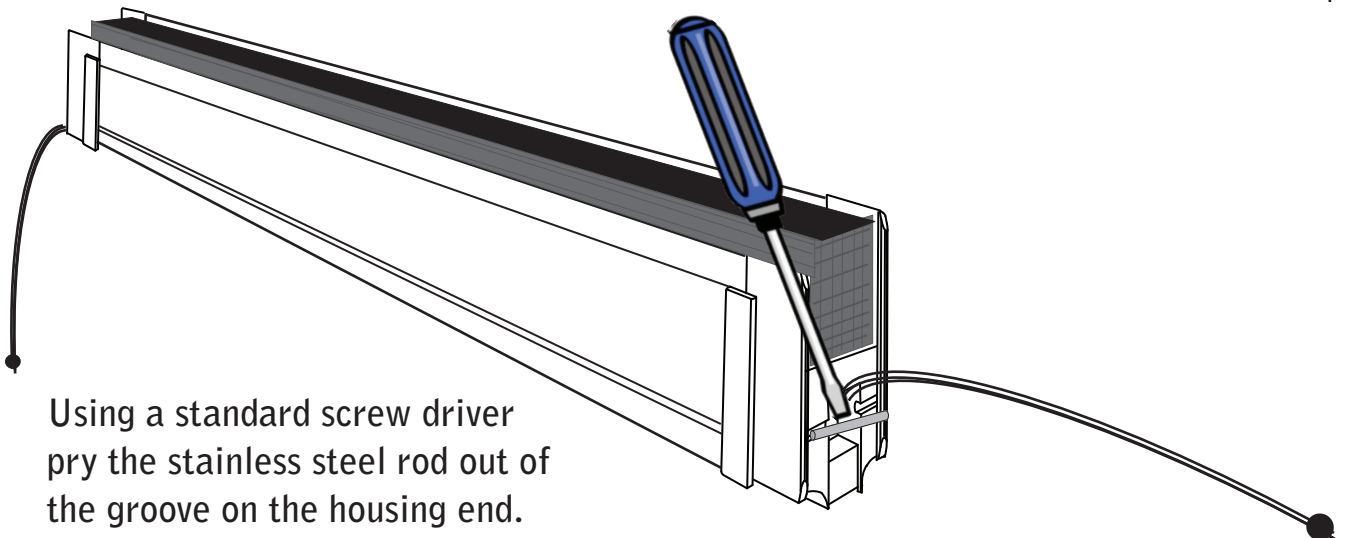


Step by Step Instructions continued

Step 5 Remove housing end


Using a number one Phillips screwdriver remove the screw from the end of the housing end.

Pull the housing end off from the

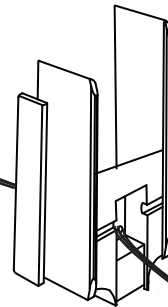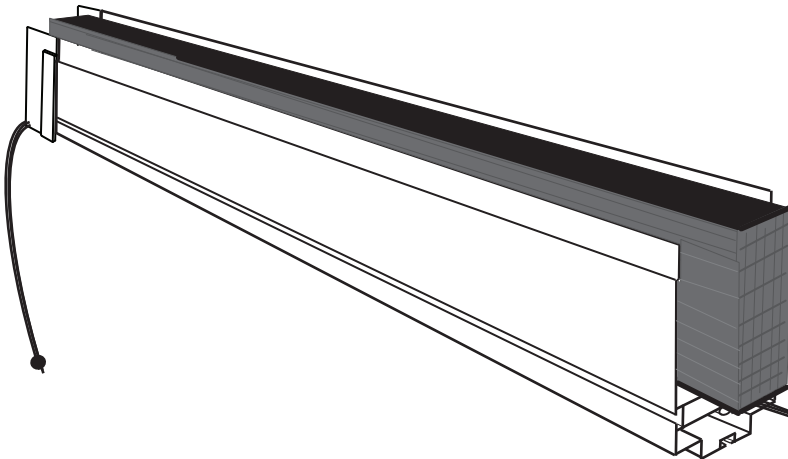

Step 6 Remove housing


Slide the housing toward the bottom(left) off of the fabric assembly.

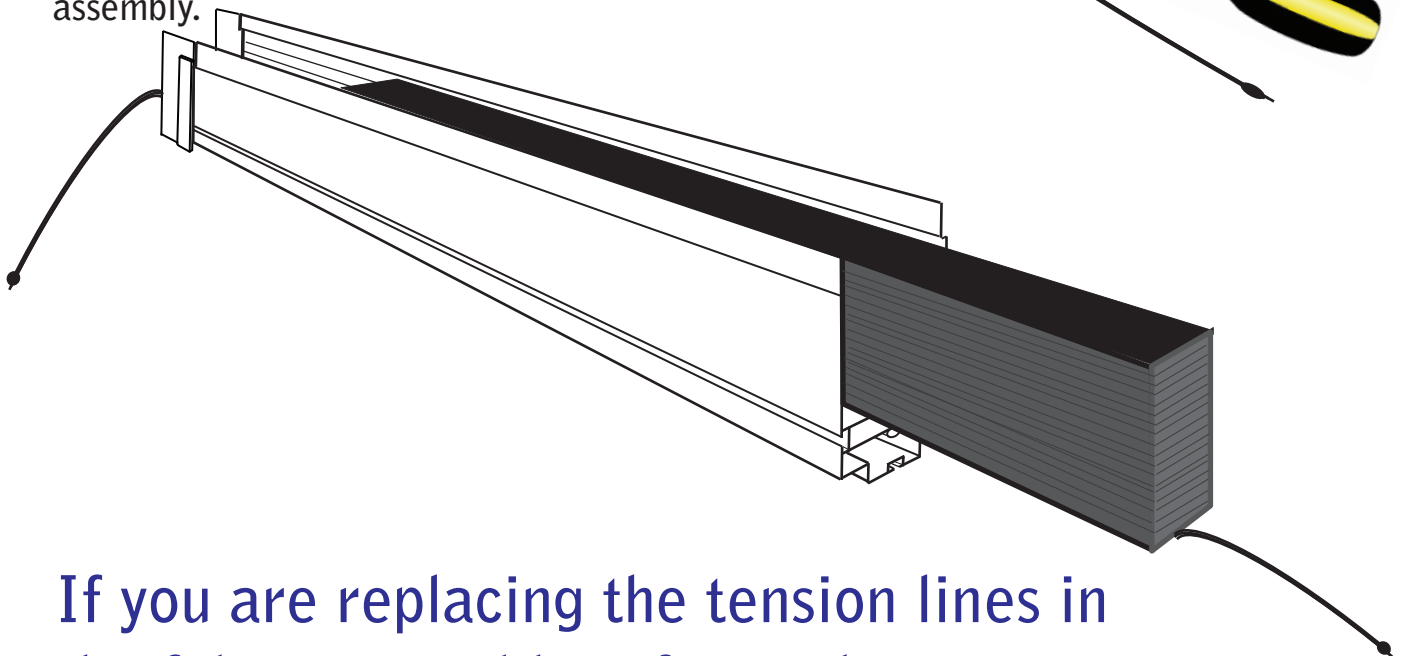

If you are replacing the tension lines in the fabric assembly refer to the tension line replacement instructions [here](#).


Step by Step Instructions continued

Step 7 Prepare fabric to be installed into housing

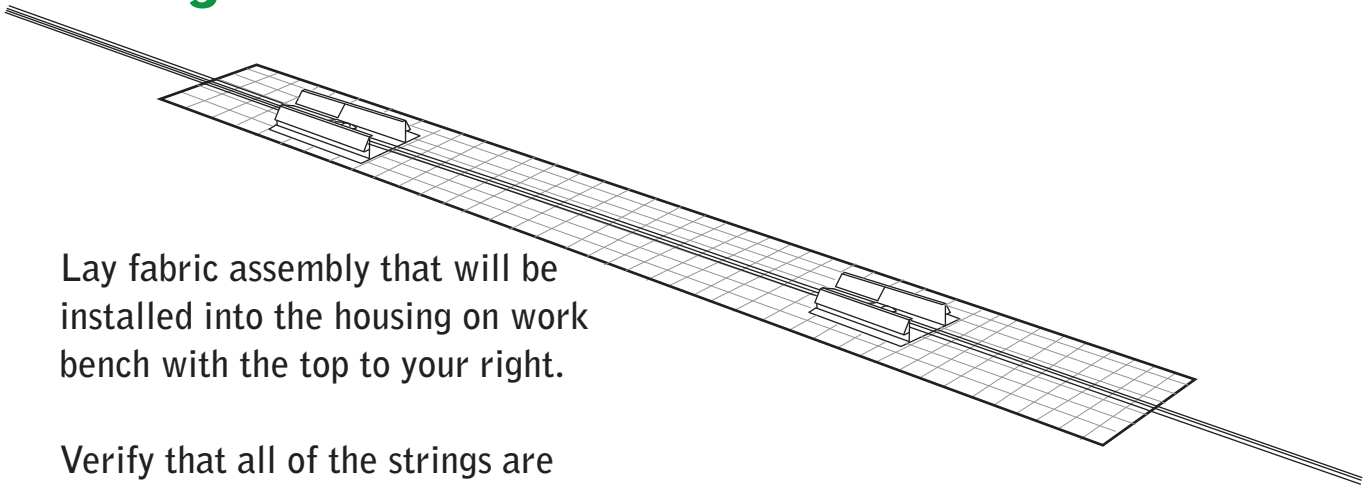

Lay fabric assembly that will be installed into the housing on work bench with the top to your right.

Verify that all of the strings are routed thru the eyelets as shown.

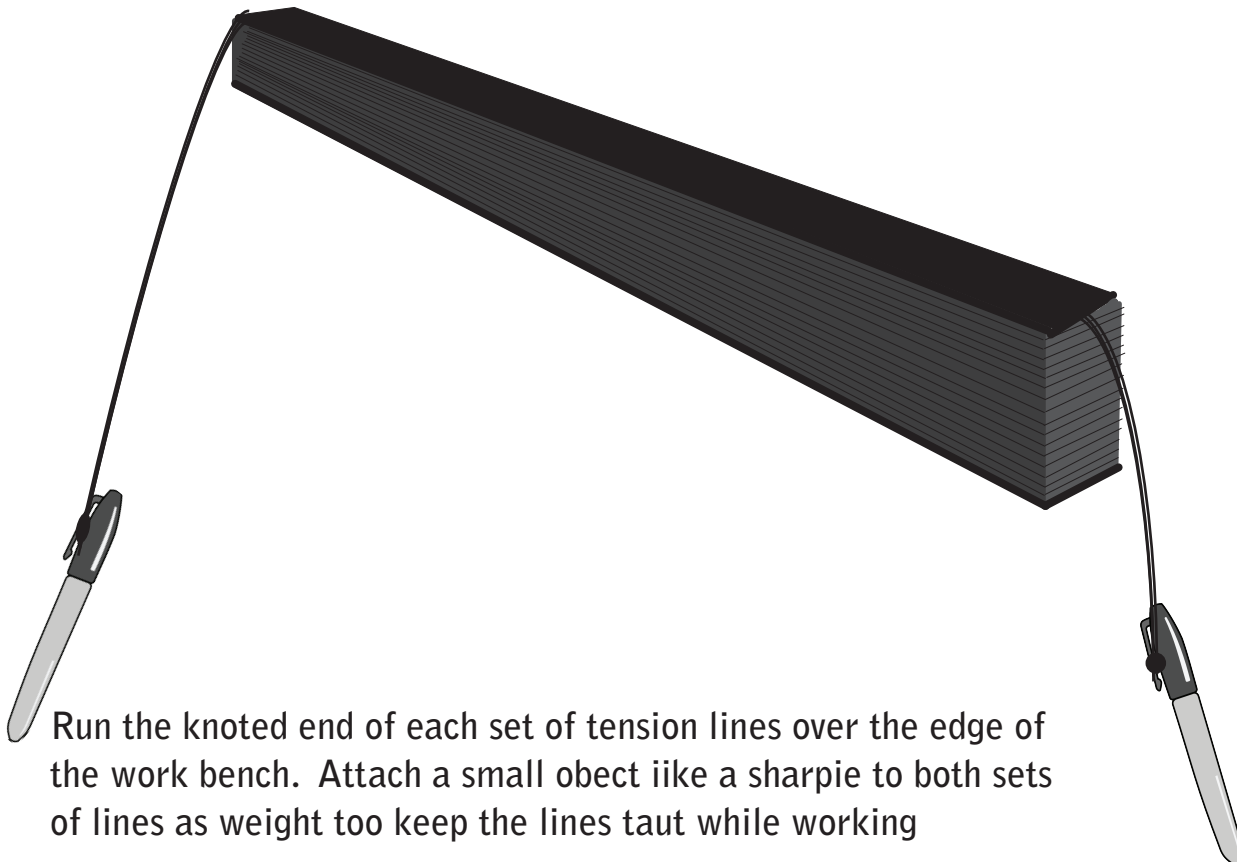

Run the knoted end of each set of tension lines over the edge of the work bench. Attach a small object like a sharpie to both sets of lines as weight to keep the lines taut while working

FABRIC ASSEMBLY REMOVE FROM HOUSING AND REPLACE


Step by Step Instructions

continued

Step 8 Slide housing onto fabric

Starting at the bottom(left end), slide the housing onto the fabric assembly. Make sure that the two fins inside the housing fit into the grooves in the eyelets.

Do not allow the lines to get slack or they may become caught up inside the housing which will cause issues once the screen is assembled.

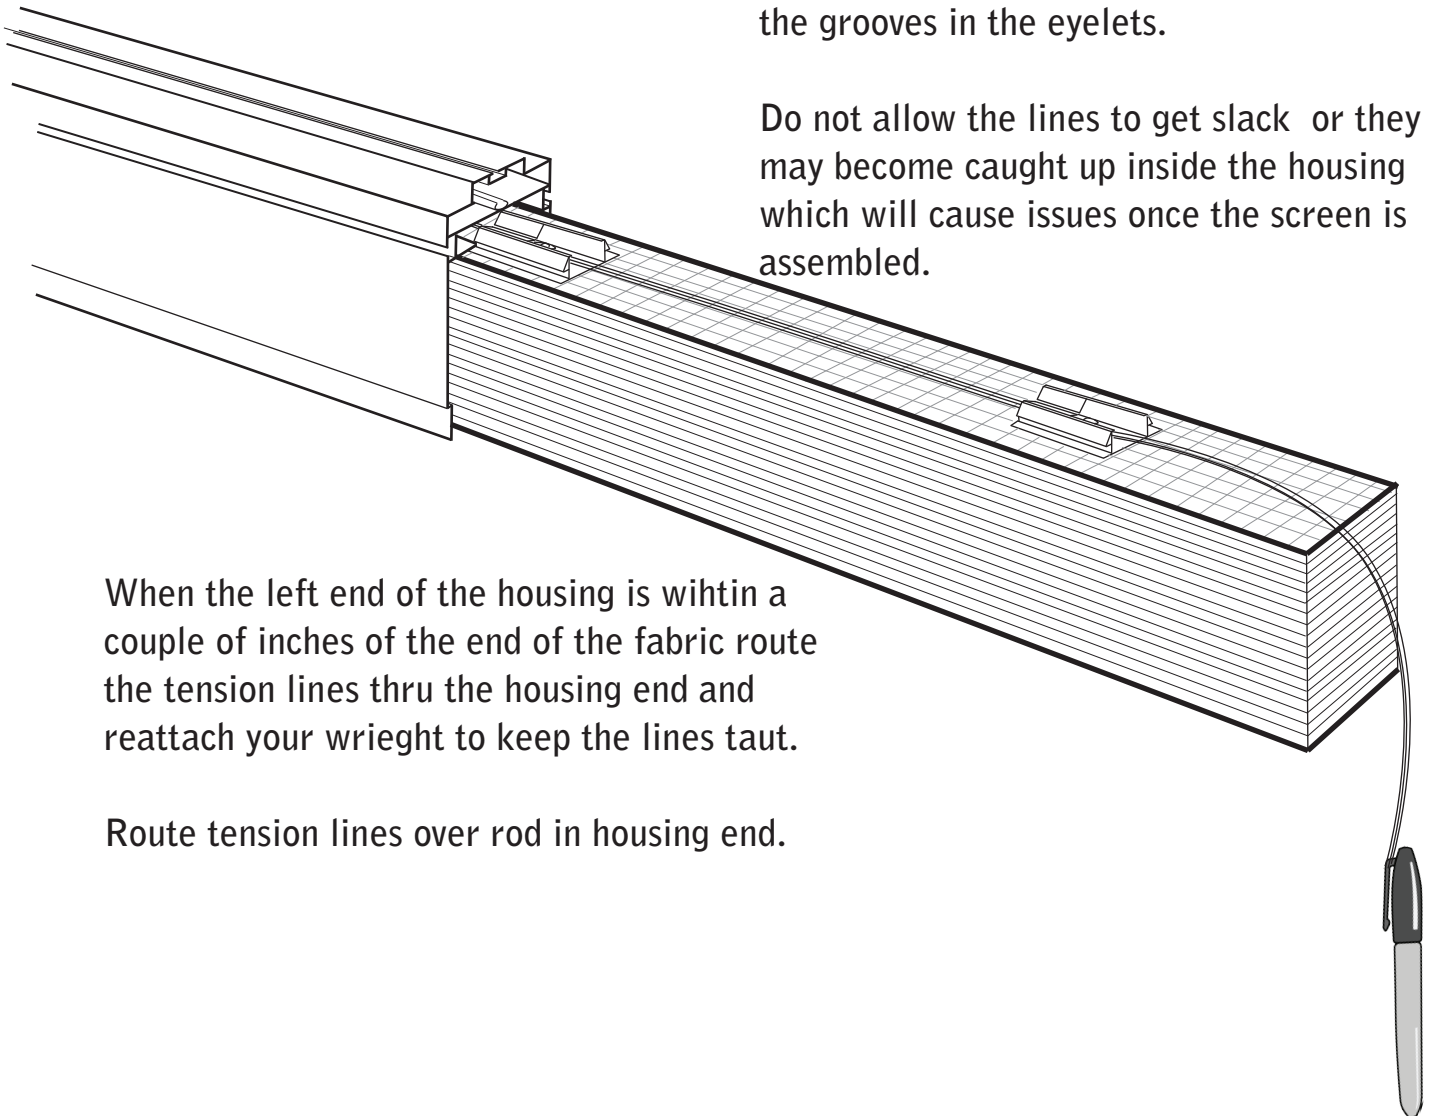

When the left end of the housing is within a couple of inches of the end of the fabric route the tension lines thru the housing end and reattach your wright to keep the lines taut.


Route tension lines over rod in housing end.

Step by Step Instructions continued


Step 9 Replace top housing end

Route the top lines thru top housing end.

Reinstall the top housing end using screw removed earlier

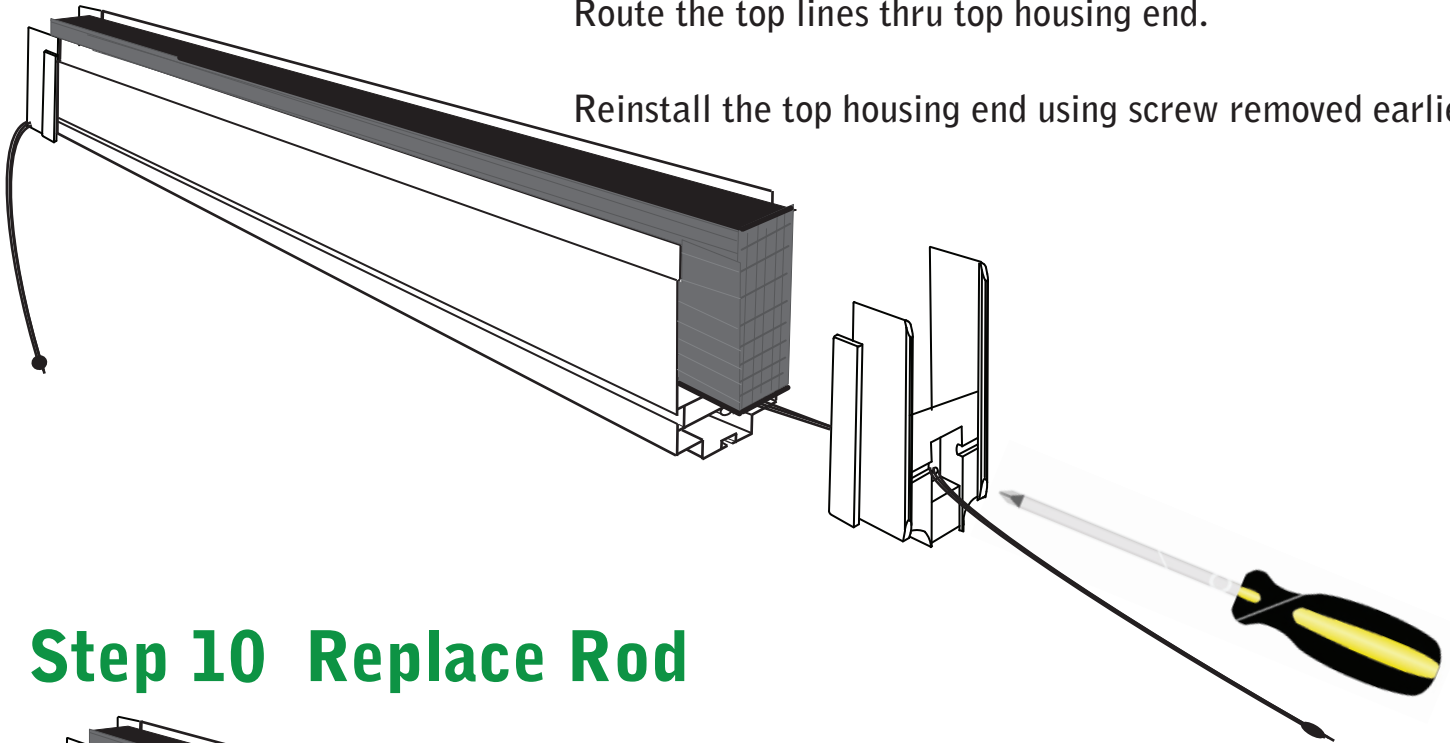

Step 10 Replace Rod

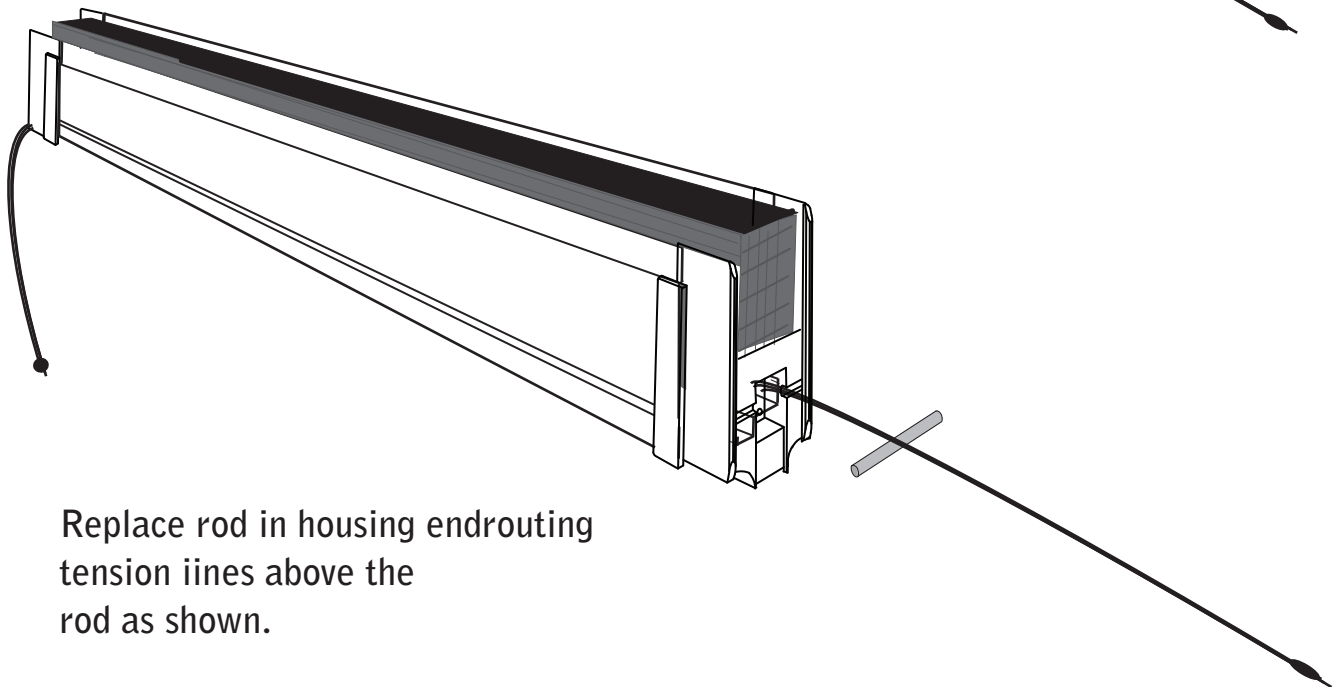


Replace rod in housing end routing tension lines above the rod as shown.

FABRIC ASSEMBLY REMOVE FROM HOUSING AND REPLACE

Step by Step Instructions

continued

Step 11 Reinstall fabric retainers

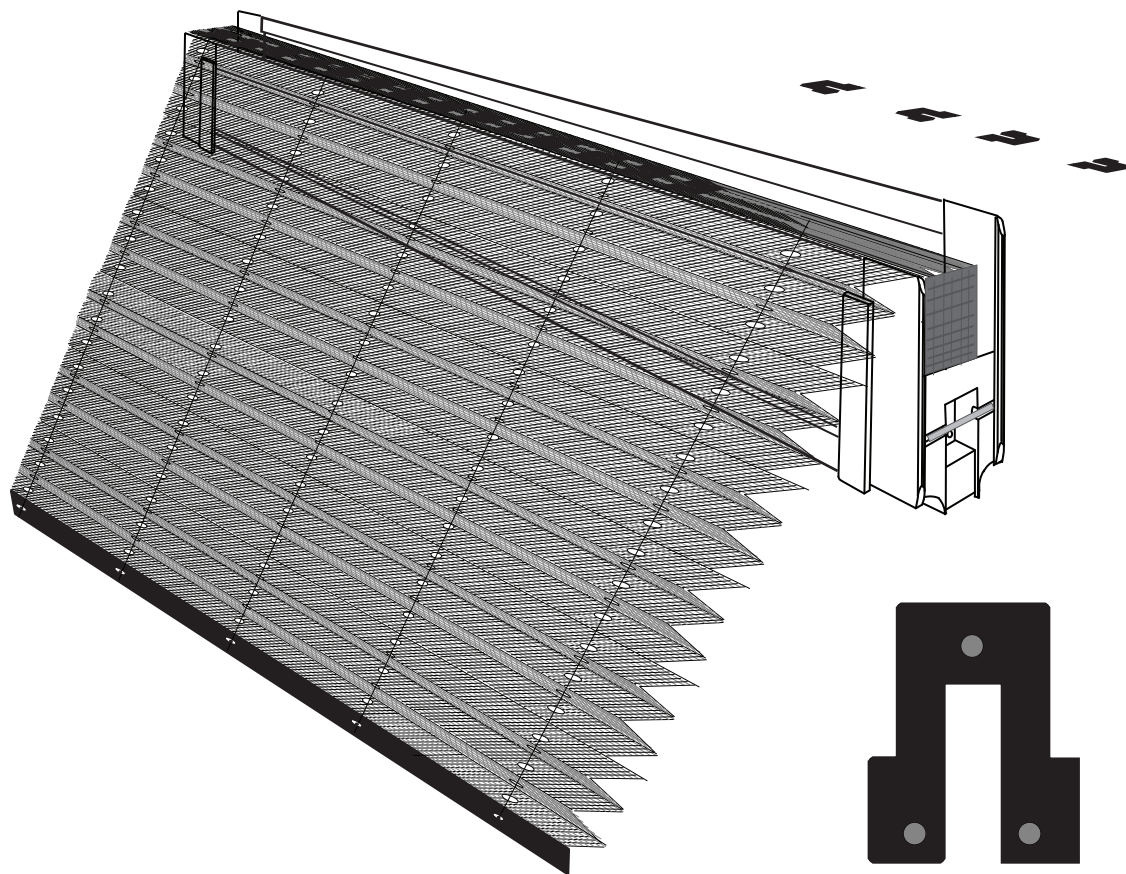

Starting from the screen board count and pull out the number of pleats you noted earlier.

Install 4 fabric retainers between each set of lines. With the round marks facing away from you, push the retainers into the fold between the pleats first and then push into the grooves on the inside of the housing. Seat the retainer as far down and as tightly against the remaining pleats as possible.



Step by Step Instructions continued

Step 12 Check for slack in lines

Separate the individual lines out of both the top and bottom sets. Firmly pull each line to be sure any slack in the housing is pulled out.


All lines should be the same length between where they come out of the housing and the knot.

If they are not the same length repeat the above step until they are.

It is critically important that the lines are even up to the knot and that no extra line is caught up inside the housing.



Step 11 Reinstall the fabric bracket

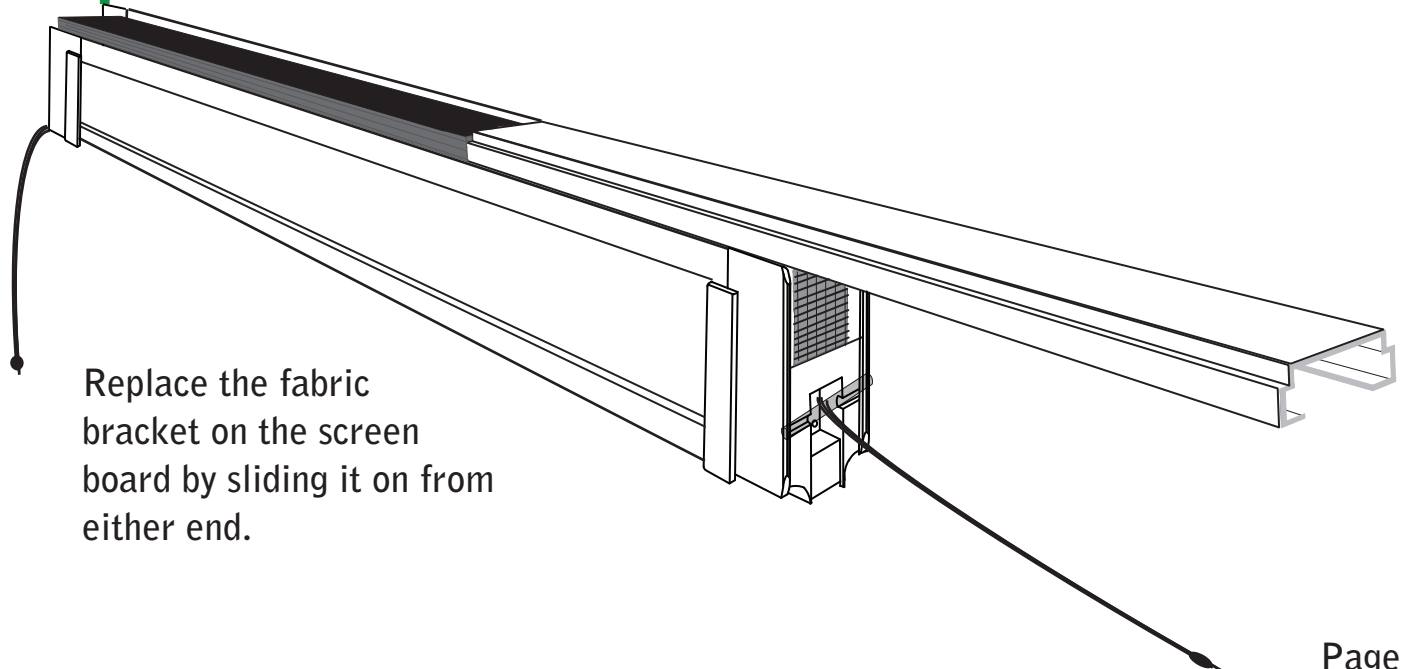

Replace the fabric bracket on the screen board by sliding it on from either end.

Plissé II Parts Identification

