

## Assembly Instructions for Trident Hatch/Door (Duo Shade/Screen)

### ASSEMBLY OVERVIEW

|              |                               |
|--------------|-------------------------------|
| Preparation: | Unpack and Check Contents     |
| Step 1:      | Route Tension Lines           |
| Step 2 :     | Side Unit Assy & Placement    |
| Step 3       | Attach & Adjust Tension Lines |
| Step 4       | Adjustments                   |
| Step 5       | Trim                          |

### PACKAGE CONTENTS

2 Side units

2 Rails


1 Large Allen wrench

6 Screen board hole cover

Handle pack

2 Handles


Small Allen Wrench

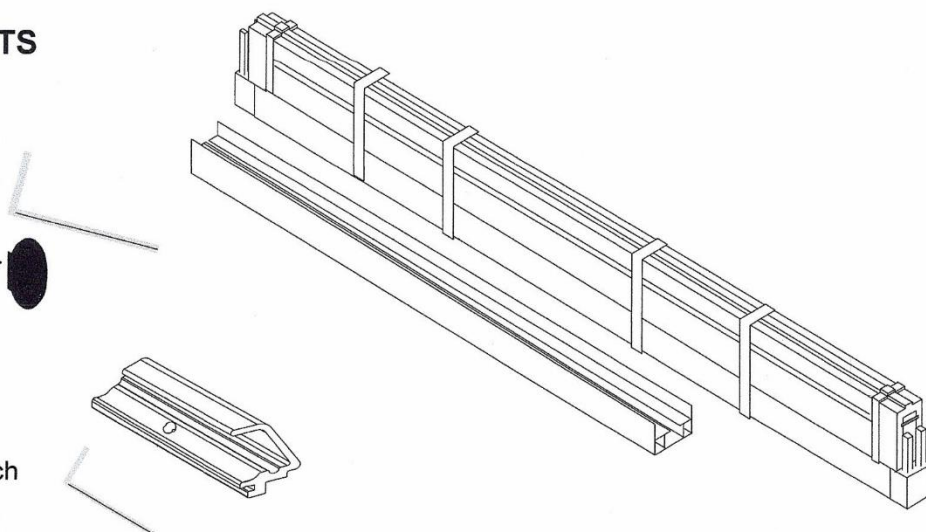

## STEP 1 - ROUTE TENSION LINES


### STEP 1-A LAYOUT SIDE UNITS AND RAILS

Layout the side units and rails as shown matching up the color dots at the four corners

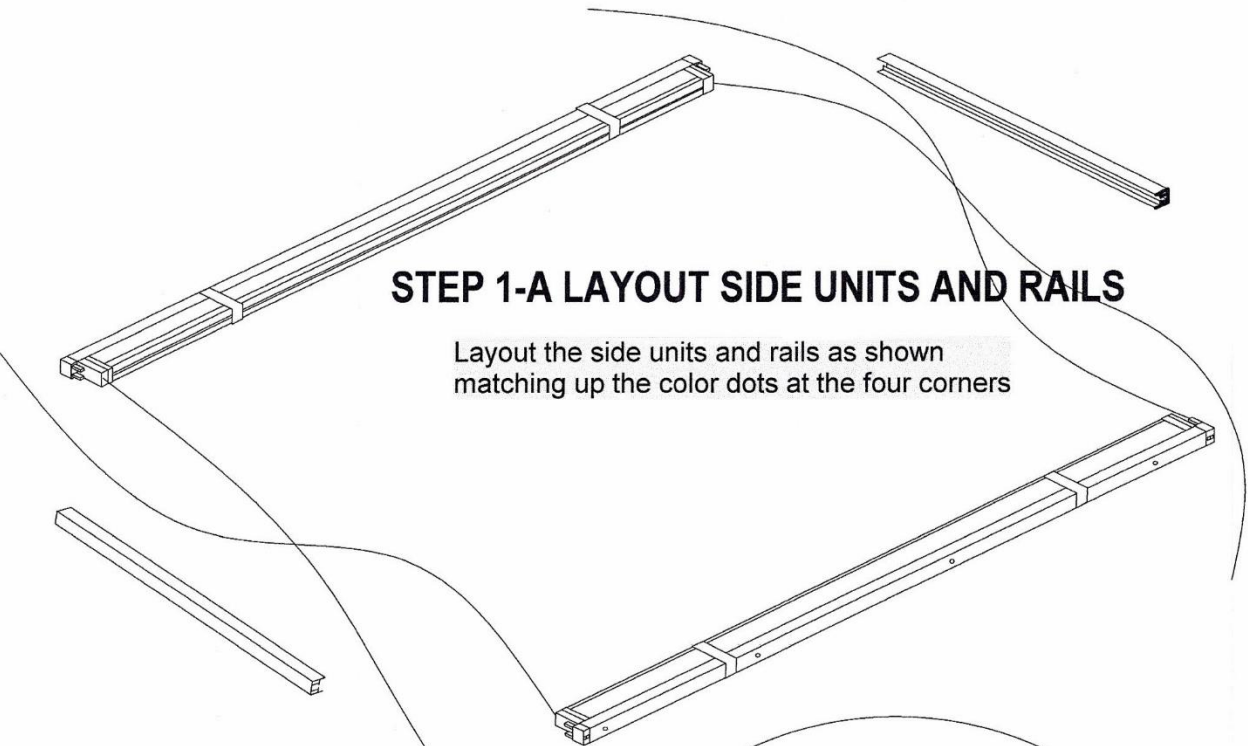


### STEP 1-B ROUTE TENSION LINES THRU CORNERS


Route the tension lines thru the opposite corners as shown.

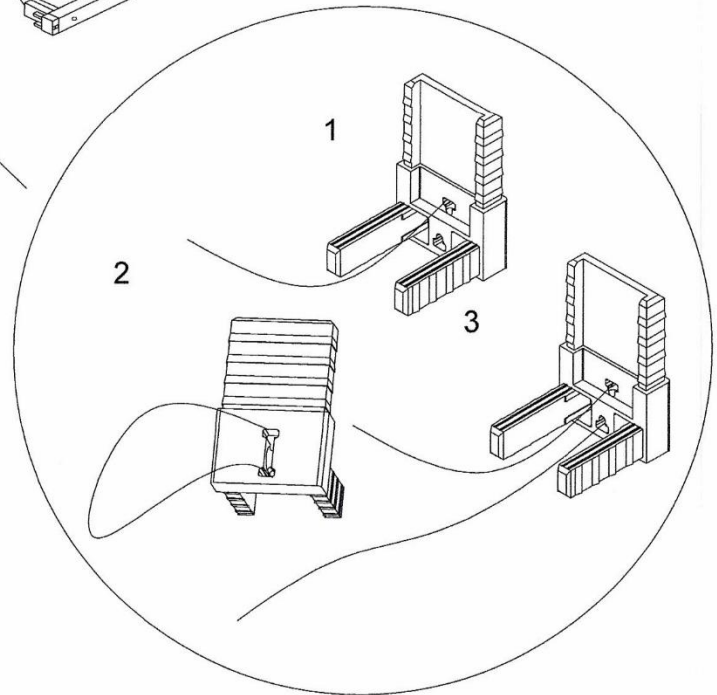

## STEP 2 - SLIDE RAILS ONTO SIDE UNITS

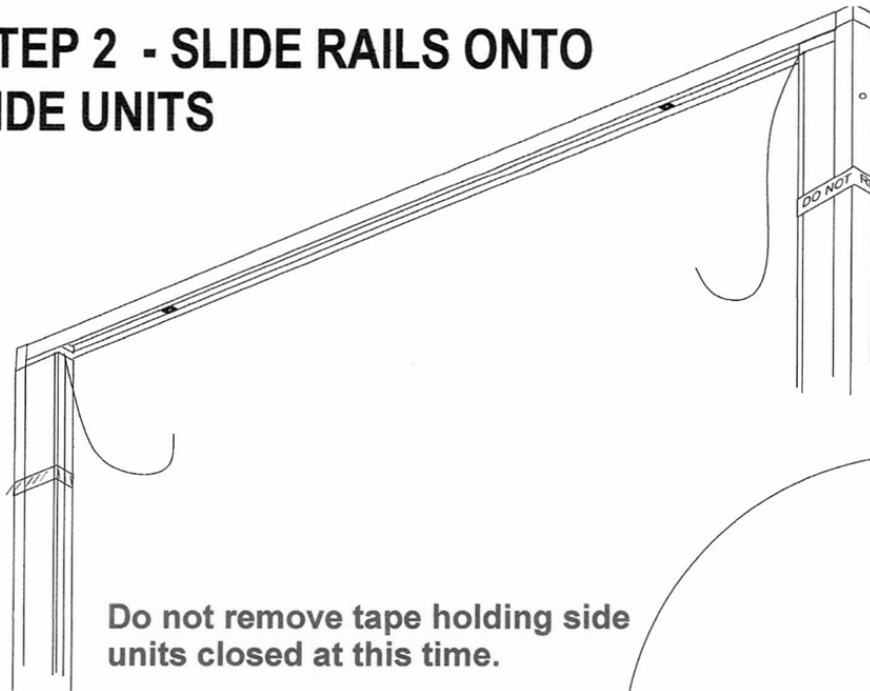


## STEP 3 - ATTACH TENSION LINES TO TENSION BLOCKS

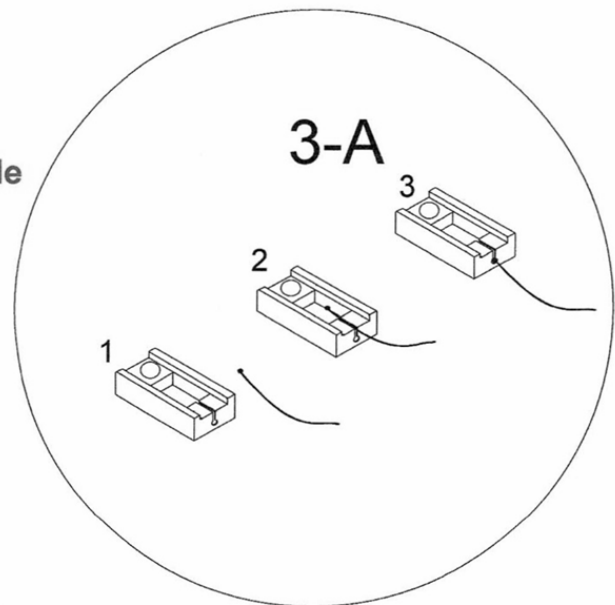

### STEP 3-A ATTACH TENSION LINES


Attach tension lines to the tension blocks by slipping knotted ends of line thru the slot in the tension block as shown.

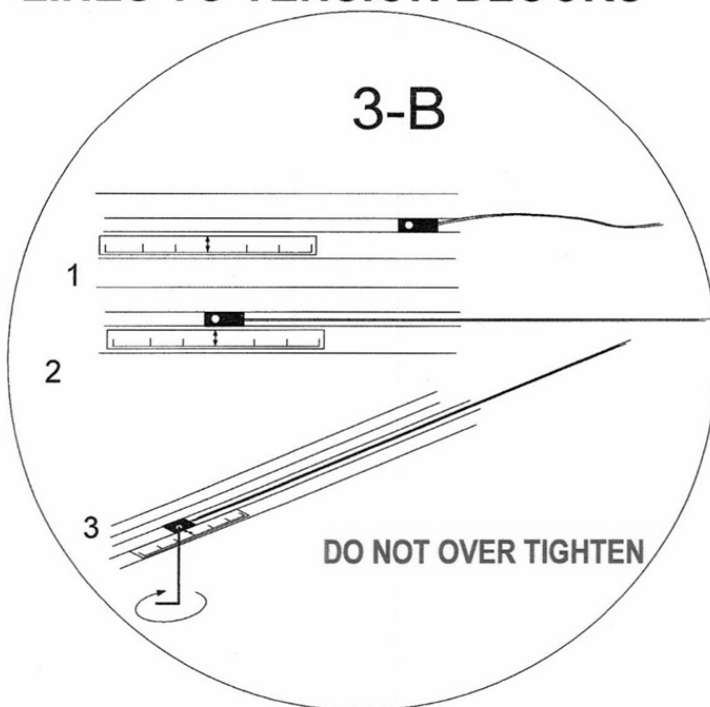

### STEP 3-B SLIDE TENSION BLOCKS TO MARKS


Slide tension blocks to arrow marks on rail stickers as shown. and tighten snugly

## STEP 5 ADJUSTMENTS

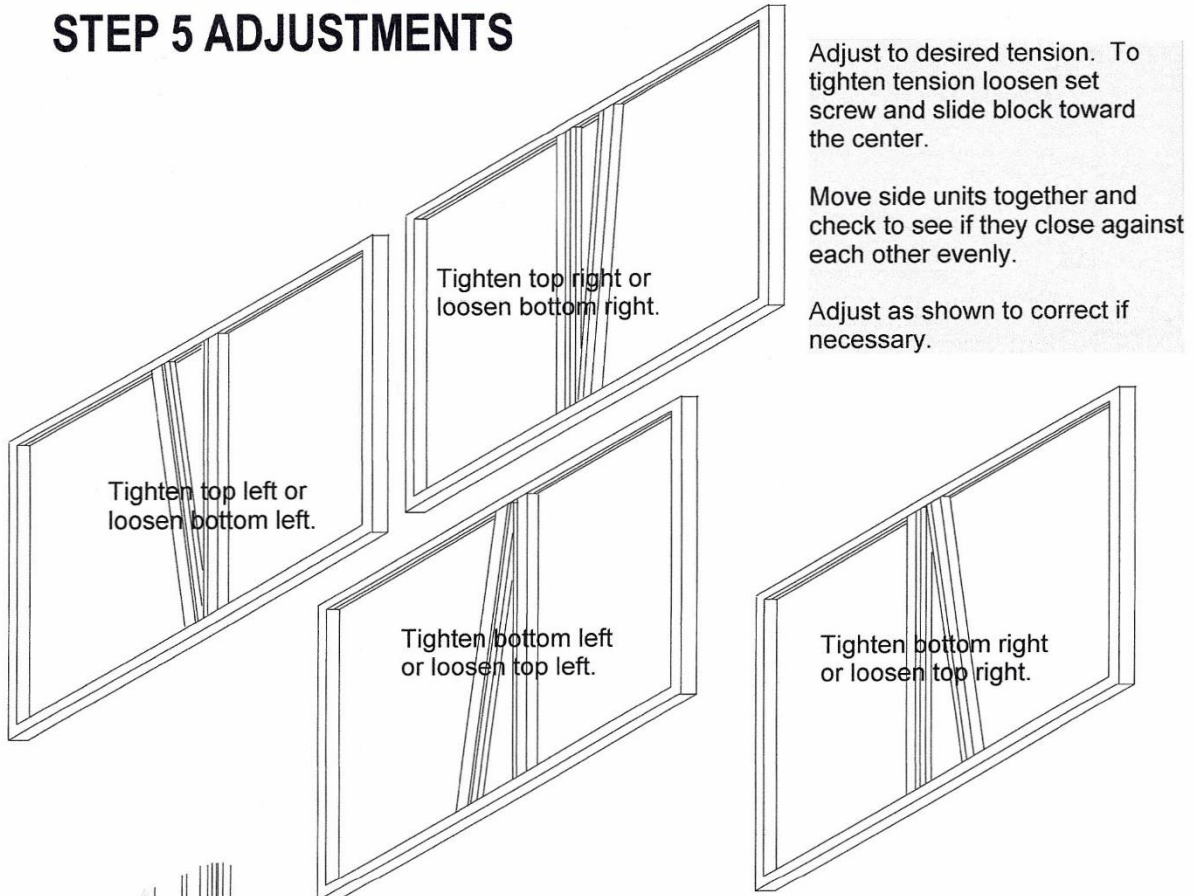

## STEP 6-B SCREW HOLE COVERS

Install screw hole covers into mounting holes behind screen fabric inside of frame.

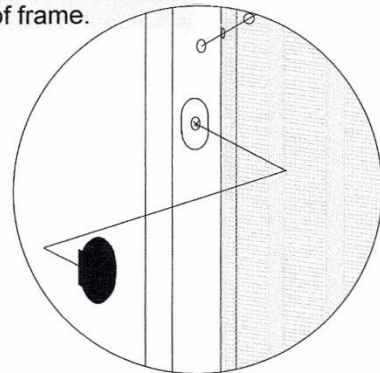

## STEP 6 TRIM STEP 6-A HANDLES

Install handles by tilting handle into groove in housing

Adjust to desired height

Tighten set screw with Allen wrench provided

